


LE-HHUVWE

Handheld Magnifier with UV & White LEDs

PRODUCT INFORMATION

Magnification	2.25X (5-Diopter) + 4X Spot Lens (12-Diopter)
Lens Dimension	19 cm x 15.7 cm (7.5" x 6.2")
Color	Black
Lighting	18 White LEDs - 2 intensity levels (6500K) 26 UV LEDs (operating at 365nm)

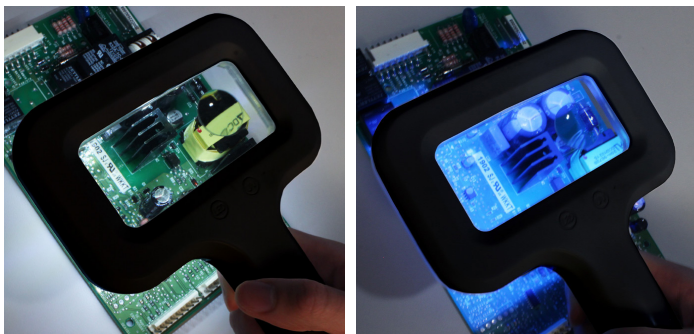

Bright White LEDs

18 White LEDs
2 intensity levels (4 watt)
Operating at 6500 Kelvin

UV LEDs

26 UV LEDs (8 Watt)
operating at 365nm



HOW TO USE



Activate the White LEDs

1. Tap once to turn on the white LEDs
2. Tap twice for higher intensity white LEDs
3. Tap three times to turn off the white LEDs




Activate the UV LEDs

1. Tap once to turn on the UV LEDs
2. Tap again to turn off the UV LEDs

High Quality Glass Lens

5 Diopter (2.25X) Glass Lens
(9.5 cm x 4.4 cm / 3.75" x 1.75")

Additional 12 Diopter (4X) Spot Lens (2.5cm / 1")

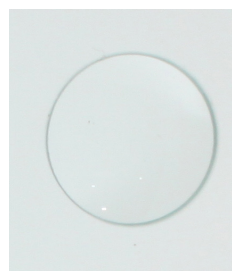

Rechargeable Battery

4,000 mAh Rechargeable Lithium Ion Battery

- Lasts 2 hours in UV mode
- Lasts up to 6 hours in white LED mode
- The device can be used with the USB cable even when the battery is drained.
- Rechargeable USB cable included (5V/1A)

TECHNICAL SPECIFICATIONS

Operation	Micro-Touch buttons 2 stage brightness intensity for White LEDs
Weight	326 g (0.72 lbs)
Dimension	13.3 cm x 3.5 cm x 21.6 cm (5.25" x 1.375" x 8.5")
5-Diopter Glass Lens	9.5 cm x 4.4 cm (3.75" x 1.75")
12-Diopter Glass Lens	Diameter: 2.5cm / 1"
Plug Type	Type C



WARNING: UV RADIATION HAZARD

**THIS LAMP EMITS UVA RADIATION (365 NM).
PROLONGED EXPOSURE MAY CAUSE EYE AND SKIN INJURY.**

TO REDUCE RISK:

- **WEAR UV-RATED PROTECTIVE EYEWEAR AND GLOVES.**
- **AVOID DIRECT EYE EXPOSURE** TO UV LIGHT.
- **MAINTAIN A SAFE DISTANCE AND LIMIT EXPOSURE TIME.**
- **USE PROTECTIVE BARRIERS** WHERE FEASIBLE.

FAILURE TO FOLLOW THESE PRECAUTIONS MAY RESULT IN INJURY.