

# Product Datasheet

**Product code:** **15AGWM.C.D.0**

**Product type:** Diamond coated Tweezers

**Made in:** Switzerland

**Description:** Type 15AGWM diamond coated hard wire cutting tweezers are suitable to applications which require cutting surgical Alloy in the medical device manufacturing. The strong blades are designed to apply moderate cutting force. The Carbon Steel provides the hard and stiff tips to perform hard Alloy cuts. The blades are hardened to 61HRC hardness. The Diamond coating (DG4) provides the Carbon steel blades with a smooth surface combined with extremely high corrosion resistance and high wear and abrasion resistance.

**Tip description:** predominantly angled blades, cutting, superior finish

**Coating/finishing:** Diamond coating (DG4)


**Body material:** Carbon Steel (C)

**Picture:**



**Tweezer dimensions:**

OAL	115.0 mm – 4.528 inch
Width	10.0 mm – 0.394 inch
Height	14.0 mm – 0.551 inch

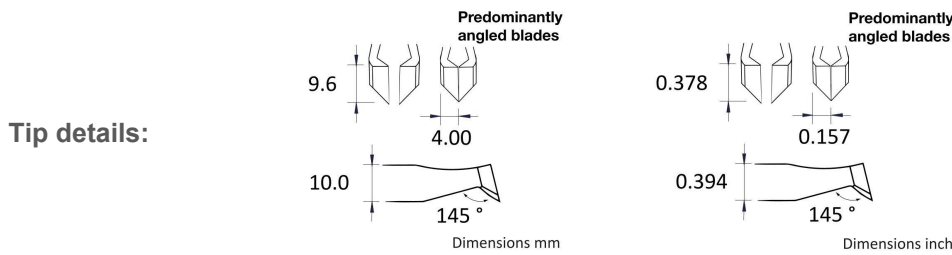

**Blade dimensions:**

Tip length	9.6 mm – 0.378 inch
Tip thickness	4.00 mm – 0.157 inch