

## Product Datasheet

**Product code:** **372S-Y35.NP**

**Product type:** ProCut Scissors

**Made in:** Italy


**Description:** The 372S-Y35 are ProCut scissors with extra fine blades, ideal for miniature work. The finger ring shape provides the scissors with an ergonomic handle suitable for multiple cuts. The Carbon Steel provides hard and stiff blades to perform cuts. The Nickel coating improves the chemical resistance. The blades are hardened.

**Tip description:** straight, extra fine

**Coating/finishing:** Nickel plated (NP)

**Body material:** C (Hardened C50)

**Picture:**

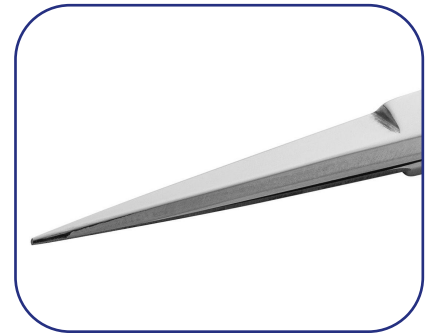

**Product dimensions:**

OAL	90.0 mm – 3.543 inch
Width	43.0 mm – 1.693 inch
Height	4.5 mm – 0.177 inch

**Tip dimensions:**

Tip width	0.40 mm – 0.016 inch
Tip thickness	0.40 mm – 0.016 inch