

Product Datasheet

Product code: **372S-YL40.NP**

Product type: ProCut Scissors

Made in: Italy


Description: The 372S-YL40 are ProCut scissors with extra fine blades, ideal for miniature work. The large finger ring shape provides the scissors with an ergonomic handle suitable for swift pick-up and placement. The Carbon Steel provides hard and stiff blades to perform cuts. The Nickel coating improves the chemical resistance. The blades are hardened.

Tip description: straight, extra fine

Coating/finishing: Nickel plated (NP)

Body material: C (Hardened C50)

Picture:

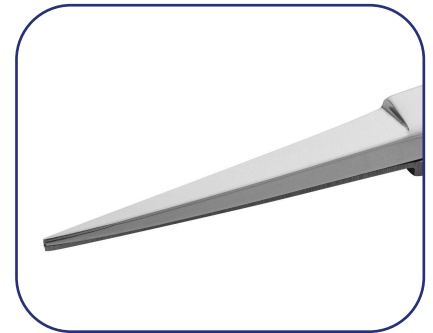

Product dimensions:

OAL	100.0 mm – 3.937 inch
Width	55.0 mm – 2.165 inch
Height	5.5 mm – 0.217 inch

Tip dimensions:

Tip width	0.30 mm – 0.012 inch
Tip thickness	0.50 mm – 0.020 inch