

Product Datasheet

Product code: 646.S.6

Product type: General Purpose Tweezers

Made in: Italy

Description: Type 646 general purpose tweezers are suitable to applications which require holding a component firmly. The curved geometry provides maximum visibility and increased ergonomics. The line serration provides the tips and the handles with extra grip, also preventing any possible slips. The alignment pin prevents the tips from intersecting.

Tip description: bent, thick, beveled, strong, line serrated

Coating/finishing: Polished

Body material: Stainless Steel (S)


Picture:



Tweezer dimensions:

| | |
|--------|-----------------------|
| OAL | 155.0 mm – 6.102 inch |
| Width | 11.0 mm – 0.433 inch |
| Height | 11.8 mm – 0.465 inch |

Tip details:

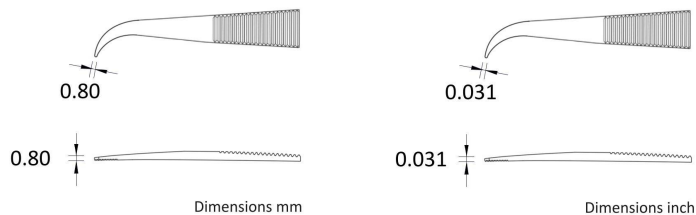

Tip dimensions:

| | |
|---------------|----------------------|
| Tip width | 0.80 mm – 0.031 inch |
| Tip thickness | 0.80 mm – 0.031 inch |