

Product Datasheet

Product code: **707A.SV**

Product type: Full Plastic Tweezers

Made in: Switzerland

Description: Type 707A full Plastic tweezers are suitable to applications which require holding a very fragile small component. The curved geometry provides maximum visibility and increased ergonomics. The Carbon Fiber reinforced ESD PVDF Plastic provides the tweezers with ESD and exceptional non-scratching properties combined with excellent chemical resistance.

Tip description: curved, fine, short

Body material: PVDF (SV)


Picture:



Tweezer dimensions:

OAL	115.0 mm – 4.528 inch
Width	11.5 mm – 0.453 inch
Height	13.0 mm – 0.512 inch

Tip details:

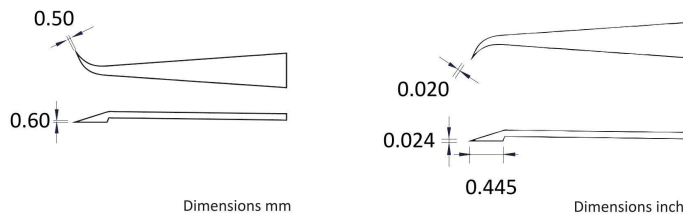

Tip dimensions:

Tip width	0.50 mm – 0.020 inch
Tip thickness	0.60 mm – 0.024 inch